

Step #1

Insert the treads into the slots in the left and right risers. Next, slip the aluminum trim onto the front of the treads. Secure the treads to the risers with the supplied #10 x 3/4" self tapping screws. Secure the aluminum trim to the treads with two #10 x 3/4" self tapping screws, one on each end of the underside of the aluminum trim (see Fig. 1).

Step #2

Attach 2 of the rear braces to the back of the step using the supplied 1/4 x 3/4" flat head screws, 1/4 flat washers and the 1/4 nylon locknuts (see Fig. 2). **Note: the side tabs on the rear brace go on the inside of the risers and the folded tab gets inserted in the back of the top tread.**

Step #3

Remove the 1/4 x 3/4" flat head screws, 1/4 washers and the 1/4 nylon locknuts from the rear brace on the ModStep 2. Next, attach the ModStep 4 assembly to the ModStep 2 using the (6) 1/4 x 3/4" flat head screws, (6) 1/4 washers and the (6) 1/4 nylon locknuts (see Fig. 3).

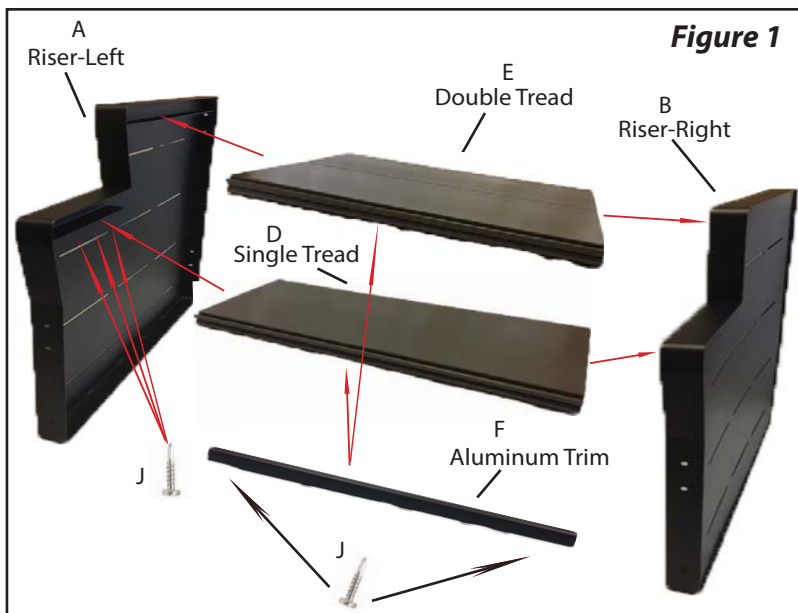


Figure 1



Figure 3

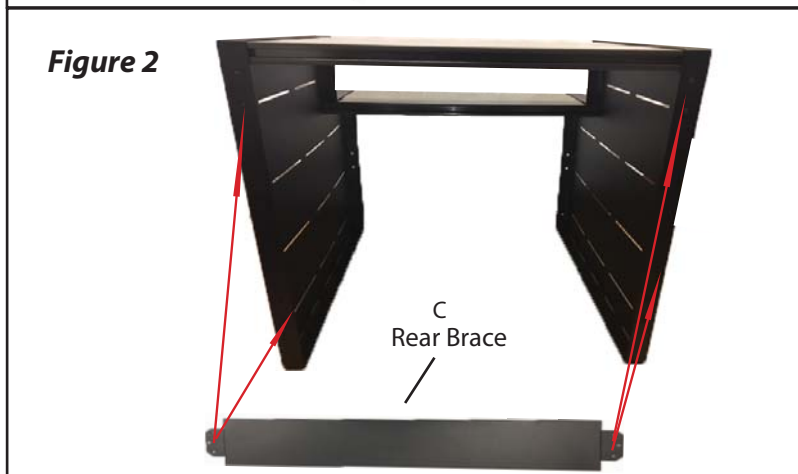


Figure 2

ITEM	PART#	DESCRIPTION	QTY
A	101476	MODSTEP 4 RISER - LEFT	1
B	101477	MODSTEP 4 RISER - RIGHT	1
C	101486	MODSTEP REAR CROSS BRACE	2
D	101492	MODSTEP TREAD	1
E	101516	MODSTEP DOUBLE TREAD	1
F	101493	MODSTEP TREAD TRIM	2
G	101495	1/4 x 1" FLAT HEAD MACHINE SCREW - STAINLESS STEEL	10
H	100608	1/4 FLAT WASHER	10
I	100607	1/4 NYLON LOCKNUT	10
J	101414	#10 X 3/4" SELF TAPPING SCREW - STAINLESS	22