

Bolt-In Version



Install Video

Step #1

Install the ball stud to the cabinet bracket using a washer and locknut (see Fig. 1). Make sure the washer goes with the ball stud on the outside of the bracket, starting with the back hole. **Note: Once final installation has been completed, if the cover doesn't lift off the spa easily, remove the shocks and move the ball stud to the front hole, then re-attach the shocks.**

Step #2

Measure 9" from the back edge of the cover and make a mark on the cover (see Fig. 5). **Note: If your spa has a 2 inch or less corner radius, measure 7 inches from the back edge of the cover, not 9 inches. Repeat on the other side.**

Step #3

Position the back edge of the cover bracket at the mark you made in step #2. While pressing the bracket firmly against the cover, make a mark with a sharpie on the cover in the middle of the vertical slots on the cover bracket (see Fig. 2). **Repeat on the other side.**

Step #4

Open the front half of the cover onto the back half of the cover. Unzip the back half of the cover, exposing the white foam (see Fig. 3). Next, insert (2) carriage bolts into the 2 square holes closest to the back of the cover, making sure the threads are pointing out and away from the spa. Next, slide the aluminum plate insert in between the foam and the cover skin, making sure the short edge of the aluminum plate insert is running along the bottom of the foam, closest to the acrylic of the spa (see Fig. 4). Slide the aluminum plate into the cover far enough so the carriage bolt threads are directly behind the marks made in step #3. With a razor blade knife, cut the cover where the holes are, just small enough to let the carriage bolt threads poke through the cover. **Repeat on the other side.** Once in position, re-zip the cover.

Step #5

Place the cover mounting bracket on the cover, making sure the threads of the carriage bolts poke through the cover bracket (see Fig. 5). Attach using the supplied washer, locknuts and beaty caps. **When attaching the cover mounting brackets, make sure to apply downward pressure on the top of the bracket to avoid any tenting of the bracket on the cover. Repeat on the other side.**

Step #6


Position the cover (in closed position) on the spa, making sure that all four corners are properly positioned and square on the spa.


Step #7

Insert the 3/8 x 1-3/4" button head socket bolt into the top hole in the back of the cover mounting bracket. Make sure to install the rubber stop on the button head socket bolt once you insert the bolt through the outside flange of the cover mounting bracket. Secure the 3/8 washer and locknut to the opposite end of the button head socket bolt. **Note: Do not overtighten locknut.** Next, attach the ball stud and washer to the cover mounting bracket (see Fig. 6).

Step #8

Attach the cabinet mounting bracket to the cover mounting bracket, in the bottom hole, using the supplied 3/8 x 1-3/4" button head socket bolt, washer and locknut (see Fig. 7). **Note: You may need to use the "optional" bracket shims to correctly position the cabinet mounting bracket to the side of the spa.**

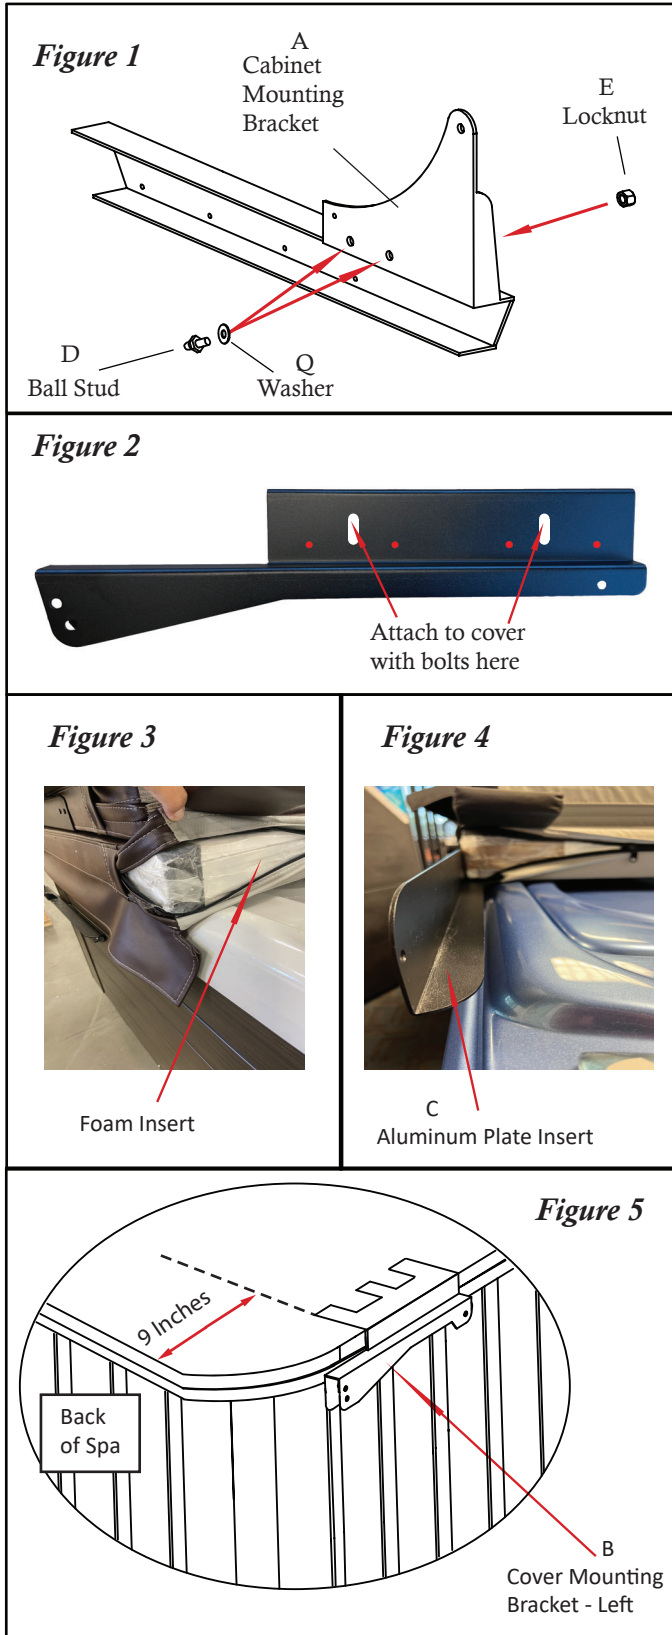

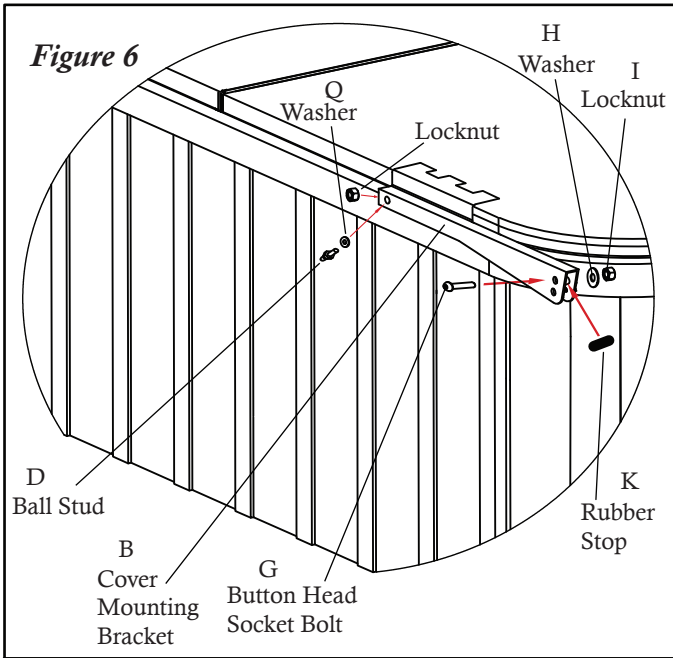

Step #9

While pressing downward on the cover, swing the cabinet bracket up until it is level and parallel with the spa acrylic. Attach the cabinet bracket using the supplied #10 x 2" mounting screws (see Fig. 7). *Note: We have added an additional mounting screw hole to the bracket for increased support and stabilization (see Fig. 7).*


Step #10

Gently raise the cover into the upright position, making sure to keep a firm grip on the cover. Attach the shocks to the cover mounting bracket ball stud and the cabinet mounting bracket ball stud. *Note: The portion of the shock with the red push tab is what gets attached to the cabinet mounting bracket (see Fig. 8).* Next, attach the "Push to Release" sticker to the shock directly under the red push tab.

Operation of the Covermate ZeroB

1. Fold the first half of the spa cover off the spa. Motion the spa cover into its vertical upright position.

2. *Important: When closing the spa cover, always make sure to unlock the shock by pushing on the unlock tube that says "Push to Release" before pulling the Covermate down to prevent possible lift damage.*

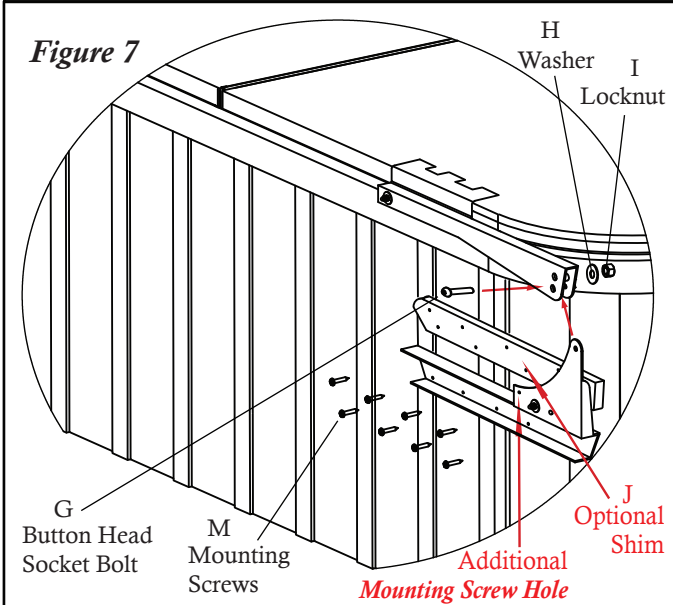

CAUTION!

Do not use the Covermate in high wind conditions. Injury from the spa cover being blown over and impacting the spa user can occur.

ITEM	PART#	DESCRIPTION	QTY
A(L)	101875	CM ZERO CABINET MOUNTING BRACKET (L)	1
A(R)	101876	CM ZERO CABINET MOUNTING BRACKET (R)	1
B(L)	101891	CM ZERO COVER MOUNTING BRACKET (L)	1
B(C)	101892	CM ZERO COVER MOUNTING BRACKET (R)	1
C	102141	CM ZERO COVER BRACKET INSERT	2
D	100244	5/16 BALL STUD	4
E	100032	5/16 NYLON LOCKNUT	4
F	100034	BLACK HEX DOME CAP	2
G	101749	3/8 X 1-3/4" BUTTON HEAD SOCKET BOLT - BLACK ZINC	4
H	100951	3/8 WASHER - BLACK ZINC	4
I	100838	3/8 LOCKNUT - BLACK ZINC	4
J	101085	BRACKET SHIM (OPTIONAL)	2
K	101885	RUBBER STOP	2
L	101873	#10 x 1" PHILIPS PAN HEAD SELF-DRILLING SCREW	8
M	100359	#10 X 2" PHILIPS PAN HEAD MOUNTING SCREW	20
N	100016	SMALL BLACK DOME CAPS	28
O	101988	SHOCK	1
P	102126	SHOCK - LOCKING	1
Q	102321	5/16 STRUCTURAL FLAT WASHER - BLACK ZINC	4
R	102392	1/4-20 X 1/2" CARRIAGE BOLT	4
S	102393	1/4" FLAT WASHER	4
T	100607	1/4-20 NYLON LOCKNUT - THIN	4
U	102394	HEX DOME CAP - 1/4"	4

