


**Step #1**

Position each CoverCatch bracket on back of spa. The location of each CoverCatch should be 12 inches from the ground and spaced 24 to 36 inches apart (see Fig. 1).

**Step #2**

Using the #10 x 1" Mounting Screws attach the CoverCatch to the side of the spa. Place the small black dome caps over the screw heads after tightening the screws.

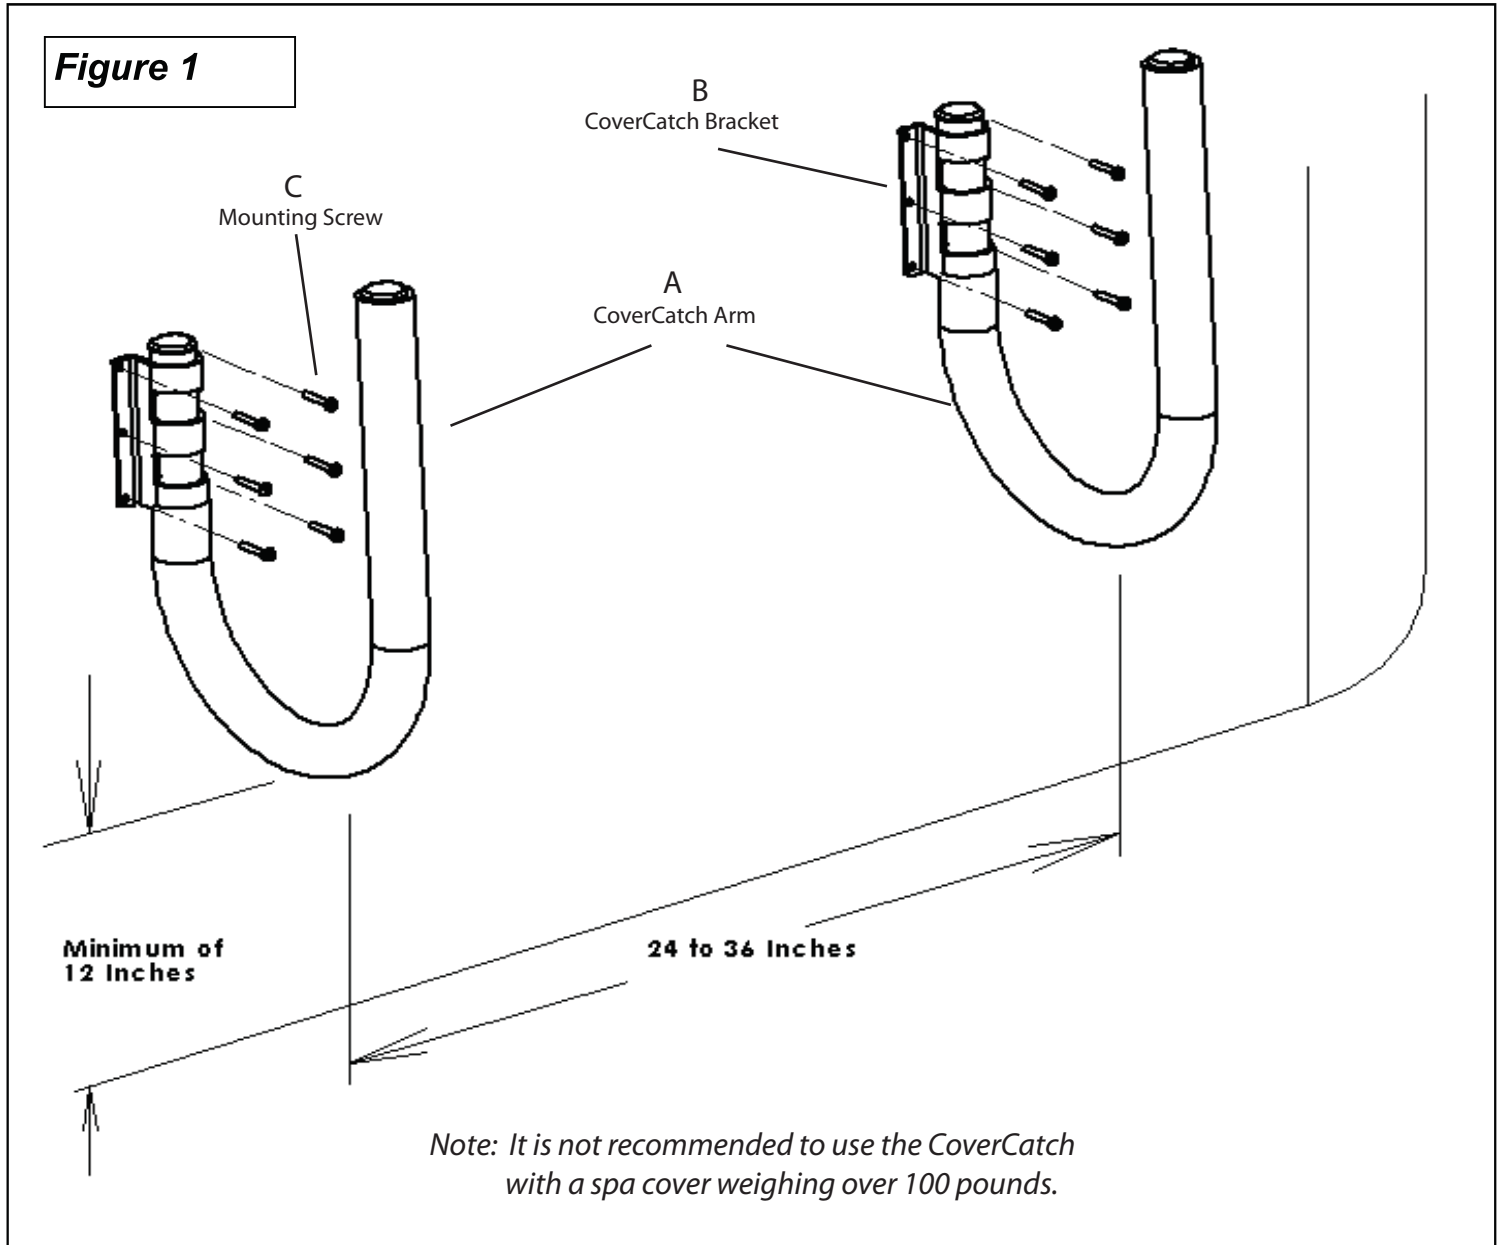

ITEM	PART#	DESCRIPTION	QTY
A	100589	COVERCATCH ARM	2
B	100263	COVERCATCH BRACKET	2
C	100014	#10 X 1" MOUNTING SCREW	12
D	100016	SMALL BLACK DOME CAP	12