

# Coast Spas CM III

Installation Instructions - Updated as of 07/12/18

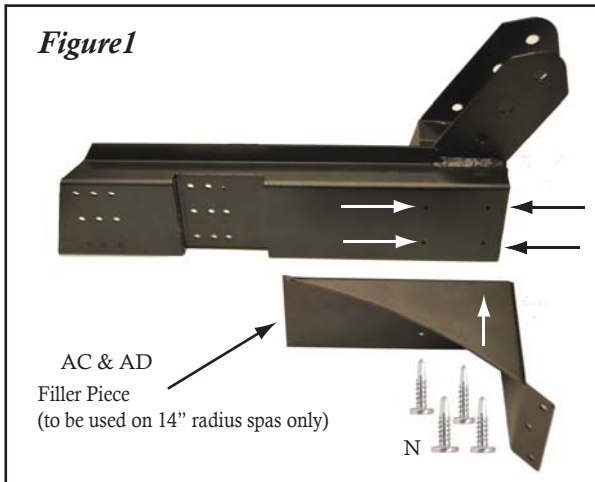


Figure 2a

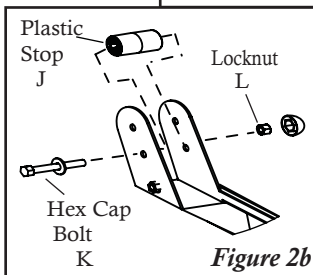
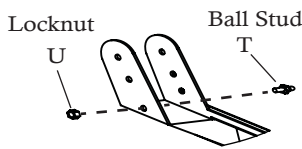


Figure 2b

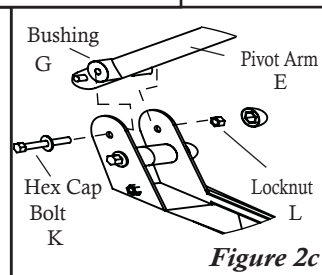


Figure 2c

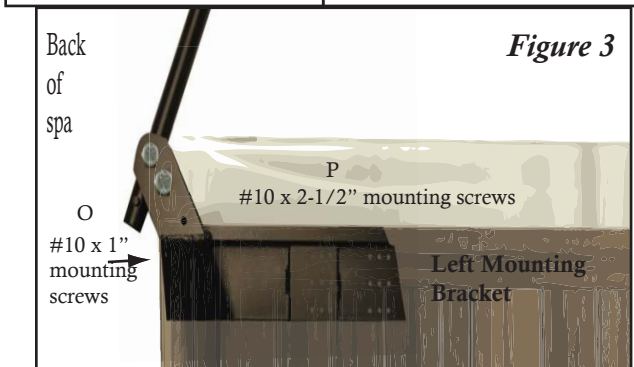


Figure 3

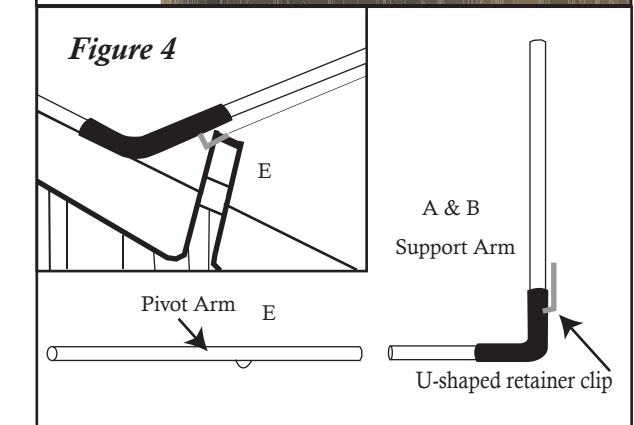


Figure 4

## Step #1

Position the spa cover (in closed position) on the spa, making sure that all four corners are properly positioned and square on the spa.

## Step #2

For 8" radius spas, skip to step 3. For 14" radius spas, attach the filler pieces to the left & right mounting brackets using (8) #10 x 5/8" self-tapping screws (see Fig. 1).

## Step #3

Attach the ball studs to the left and right mounting brackets (see Fig. 2a).

## Step #4

Install the plastic stop and pivot arm assembly (see Fig. 2b & 2c). **Note: Lightly tighten bolt assembly.**

## Step #5

Attach the left and right mounting brackets to the appropriate sides of the spa using (6) #10 x 1" and (36) #10 x 2-1/2" screws (see Fig. 3).

## Step #6

Starting with the left side first, lay the long end of the cover support arm on the top of the cover, lying parallel to the spa cover hinge about 1/2" away. Slide the U-shaped retainer clip between the two cover halves with the horizontal part touching the underside of the cover hinge. **Note: Do not insert the U-shaped retainer clip in between the seams of the spa cover (see Fig. 4).** With the left support arm lying on the cover, slide the center coupler piece over the long end of the left cover support arm. Next, slide the long end of the right support arm into the center coupler and slide the U-shaped retainer clip between the two cover halves.

## Step #7

Slide the left and right pivot arms onto the short end of the support arms. Then connect the pivot arms to the brackets (see Fig. 4 & 2 respectively). **Note: Do not insert the self-tapping screws at this time. This will be completed in step# 9.** Be sure to run the bolt head as pictured. **Lightly tighten the bolt so that the pivot can move freely.** **Note: Over-tightening may lead to failure of the bracket.**

## Step #8

Next, install the ball studs to the left and right pivot arms. **Note: Be sure that the ball is pointing away from the spa (see Fig. 5).**

## Step #9

With the center coupler piece and support arms adjusted properly (about 1/2" away from cover hinge and centered on spa), using the #10 self-tapping screws, fasten the support arms to pivot arms and center coupler piece to the support arms (see Fig. 6). **Note: Be sure to rotate the coupler so that the inserted screws are at a horizontal angle with the screw head facing the back of the spa.**

## Step #10

Using the Covermate, lift the cover off the spa and place it in the upright position. Snap the gas shocks on the ball studs. **Note: Be sure to install the gas shocks with the black body on top (see Fig. 7).** **Note: You may need to pull back on the pivot arm a small amount to be able to attach the shock to the pivot arm.**

## Step #11

Attach the provided 3 hook TowelMate on the preferred side of your Covermate by simply snapping it into place and inserting the middle self-tapping screw (see Fig 8).

## Operation of the Coast Spas Covermate III

1. Fold the first half of the spa cover off the spa. Gripping the foam grip, motion the spa cover into its vertical upright position.

**2. Important:** When closing the spa cover, always make sure to unlock the shock by pushing on the orange stop before pulling the Covermate down to prevent possible lift damage.

### CAUTION!

Do not use the Covermate in high wind condition. Injury from the spa cover being blown over and impacting the spa user can occur.

ITEM	PART#	DESCRIPTION	QTY
A	100028	SUPPORT ARM W/RETAINER-RIGHT	1
B	100029	SUPPORT ARM W/RETAINER-LEFT	1
C	100002	FOAM GRIP 8"	2
D	100003	CENTER COUPLER	1
E	100022	PIVOT ARM	2
G	100344	BUSHING	4
H (L)	100622	ALUMINUM BRACKET - LEFT	1
H (R)	100623	ALUMINUM BRACKET - RIGHT	1
I	100008	TOWELMATE	1
J	100033	CMIII PLASTIC STOP	2
K	100026	3/8 X 2-3/4" HEX CAP BOLT	4
L	100011	3/8 NYLON LOCKNUT	4
M	100012	3/8 FLAT WASHER	4
N	100013	#10 X 5/8" SELF-TAPPING SCREWS	20
O	100014	#10 X 1" MOUNTING SCREWS	6
P	100367	#10 X 2-1/2" MOUNTING SCREWS	36
R	100016	SMALL BLACK DOME CAP	54
S	100015	LARGE BLACK DOME CAP	8
T	100244	5/16 BALL STUD	4
U	100032	5/16 NYLON LOCKNUT	4
V	100034	HEX PLASTIC DOME CAP	4
Y	101632	SHOCK-CMIII LOCKING	1
Z	101510	SHOCK-CMIII	1
AC	100618	ALUMINUM FILLER - LEFT	1
AD	100619	ALUMINUM FILLER - RIGHT	1

