

**Step #1**

Insert the treads into the slots in the left and right risers. Next, slip the aluminum trim onto the front of the treads. Secure the treads to the risers with the supplied #10 x 3/4" self tapping screws. Secure the aluminum trim to the treads with two #10 x 3/4" self tapping screws, one on each end of the underside of the aluminum trim (see Fig. 1).

**Step #2**




Attach the rear brace to the back of the step using the supplied 1/4 x 3/4" flat head screws, 1/4 flat washers and the 1/4 nylon locknuts (see Fig. 2).

**Note: If building a ModStep 3 or 4, attach the rear brace, but do not install the screws, this will happen later in the ModStep 3 or 4 instructions.**

**Note: The side tabs on the rear brace go on the inside of the risers and the folded tab gets inserted in the back of the top tread.**

**Step #3**

Attach the front brace to the front of the step using the supplied 1/4 x 3/4" flat head screws, 1/4 flat washers and the 1/4 nylon locknuts (see Fig. 3).

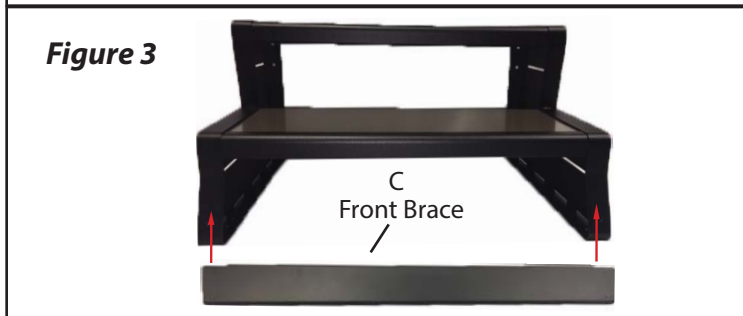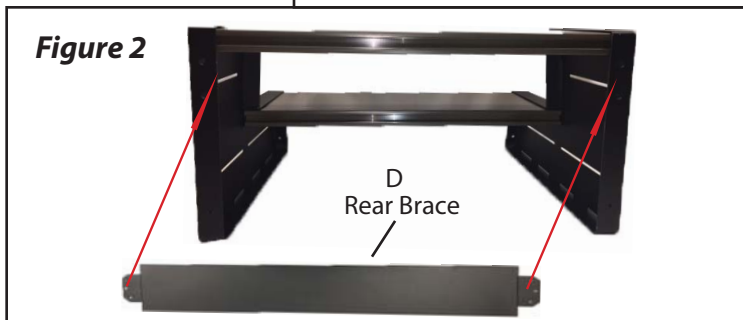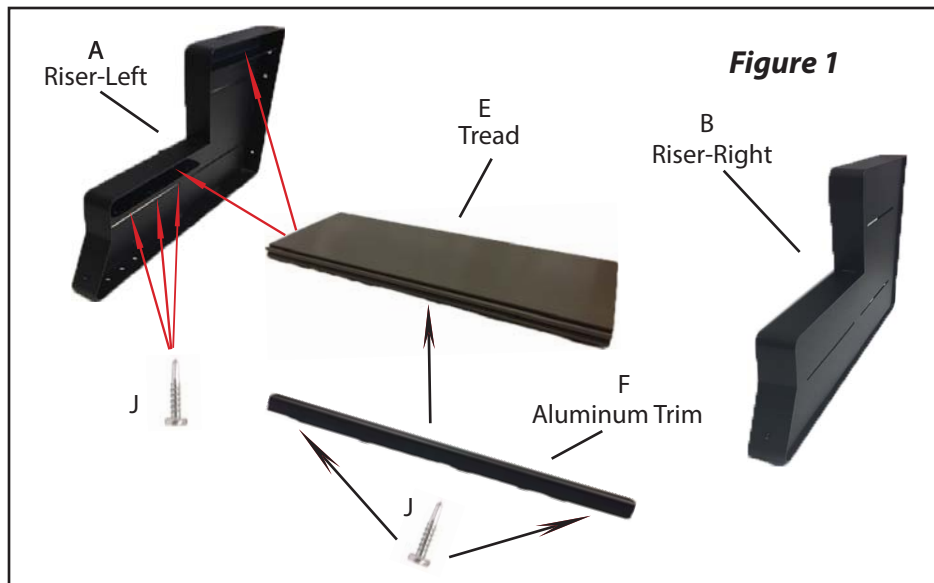

ITEM	PART#	DESCRIPTION	QTY
A	101471	MODSTEP 2 RISER - LEFT	1
B	101472	MODSTEP 2 RISER - RIGHT	1
C	101473	MODSTEP 2 FRONT CROSS BRACE	1
D	101486	MODSTEP REAR CROSS BRACE	1
E	101492	MODSTEP TREAD	2
F	101493	MODSTEP TREAD TRIM	2
G	101396	1/4 x 3/4" FLAT HEAD MACHINE SCREW - STAINLESS STEEL	8
H	100608	1/4 FLAT WASHER	8
I	100607	1/4 NYLON LOCKNUT	8
J	101414	#10 X 3/4" SELF TAPPING SCREW - STAINLESS	16