
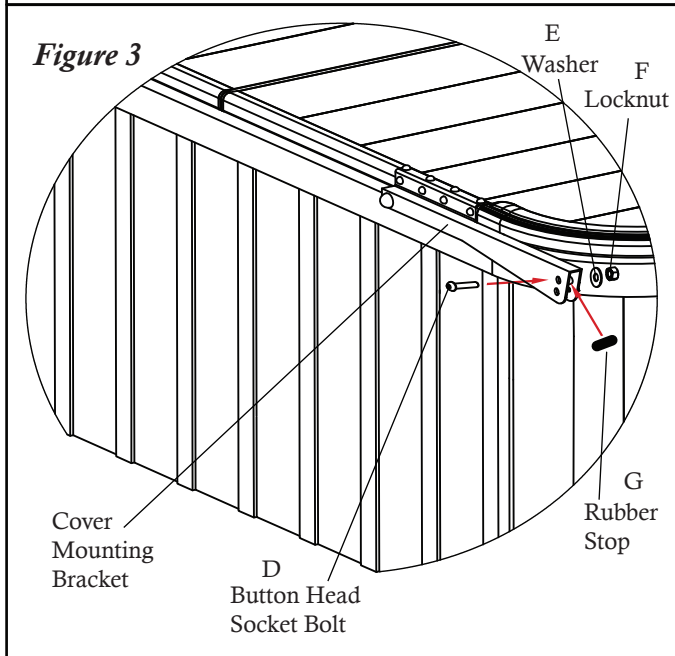
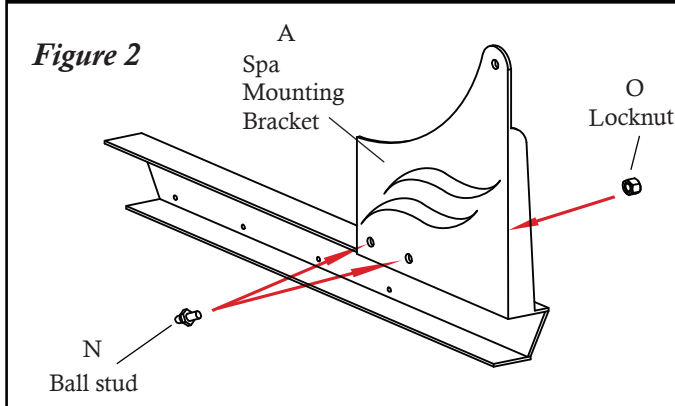


SMARTOP

Upright 3.0R

by Leisure Concepts

Installation Instructions - Updated as of 01/25/21

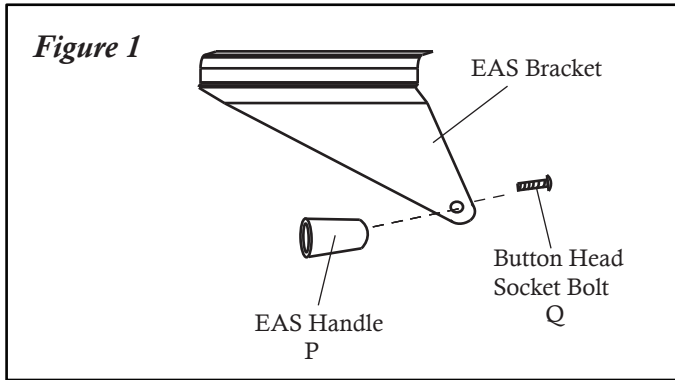

Step #1

Position the Smartop (in closed position) on the spa making sure that all four corners are properly positioned and square on the spa.

Step #2

Attach the EAS handle to the EAS bracket using the supplied 5/16 x 1-1/4" button head socket bolt (see Fig. 1).

Step #3

Attach the ball stud to the spa mounting bracket in the hole closest to the back of the bracket (see Fig. 2). **Note:** Once final installation has been completed, if the cover doesn't lift off the spa easily, start by moving one of the ball studs on one side of the spa to the front hole and re-attach the shocks. If the cover still doesn't lift off the spa easily, move the ball stud on the other side of the spa and re-attach the shocks.

Step #4


Insert the 3/8 x 1-3/4" button head socket bolt into the top hole in the back of the Smartop cover mounting bracket. Make sure to install the rubber stop on the button head socket bolt once you insert the bolt through the outside flange of the Smartop cover mounting bracket. Secure the 3/8 washer and locknut to the opposite end of the button head socket bolt (see Fig. 3). **Note:** Do not overtighten locknut.

Step #5

Attach the Smartop 3.0 cabinet mounting bracket to the Smartop 3.0 cover mounting bracket, in the bottom hole, using the supplied 3/8 x 1-3/4" button head socket bolt, washer and locknut (see Fig. 4). **Note:** Make sure to use the plastic spacers on either sides of the Smartop cabinet mounting bracket where the bolt goes through.

Step #6

While pressing downward on the Smartop cover mounting bracket, swing the Smartop cabinet mounting bracket up until it is parallel with the spa acrylic and attach to the spa cabinet using the supplied #10 x 2" mounting screws (see Fig. 4).

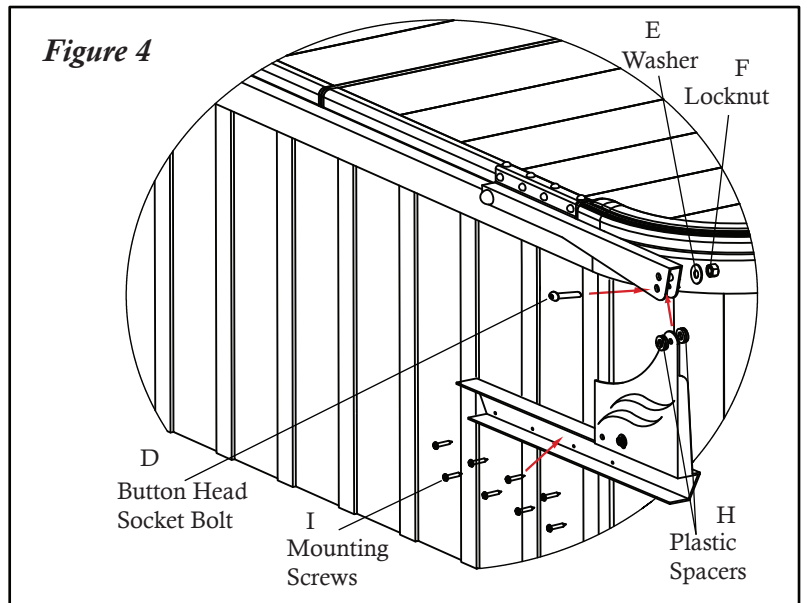

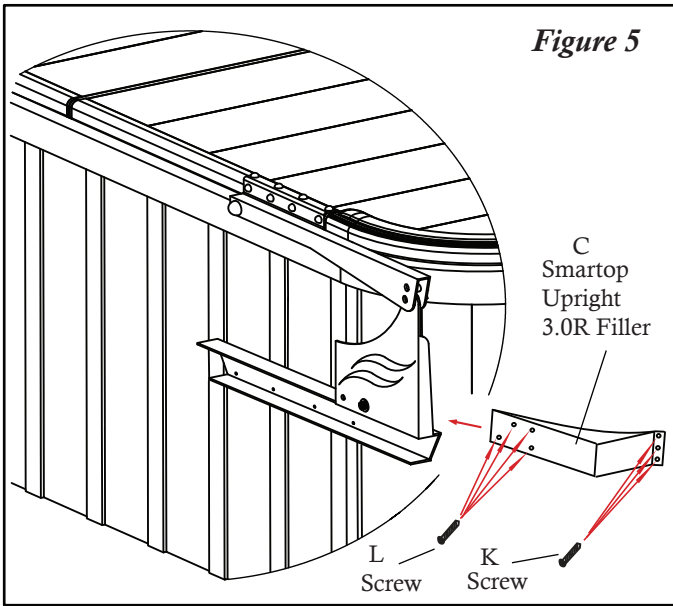


Figure 5

Step #8

Slide the Smartop Upright 3.0R filler bracket in behind the bracket assembly and attach it to the spa cabinet using the (3) #10 x 1" self-tapping screws (see Fig. 5). Attach the Smartop Upright 3.0R spa mounting bracket to the filler piece using (4) #10 x 1" self-drilling screws (see Fig. 5).

Step #9

Gently raise the cover into the upright position, making sure to keep a firm grip on the cover and attach the shocks to the Smartop cover mounting bracket ball stud. Next, attach the other end of the shock to the Smartop spa mounting bracket ball stud (see Fig. 6). **Note: When attaching the shocks, make sure the black body of the shock is on top.**

Step #10

Connect the Sure Lock latch assembly to the latch catch. **While pushing down on the Smartop**, position the Sure Lock latch on the side of the spa and mark where the latch base rests against the spa skirting. Attach the Sure Lock latch to the spa skirting, where marked, using the supplied #8 x 3/4" self-tapping screws (see Fig. 7).

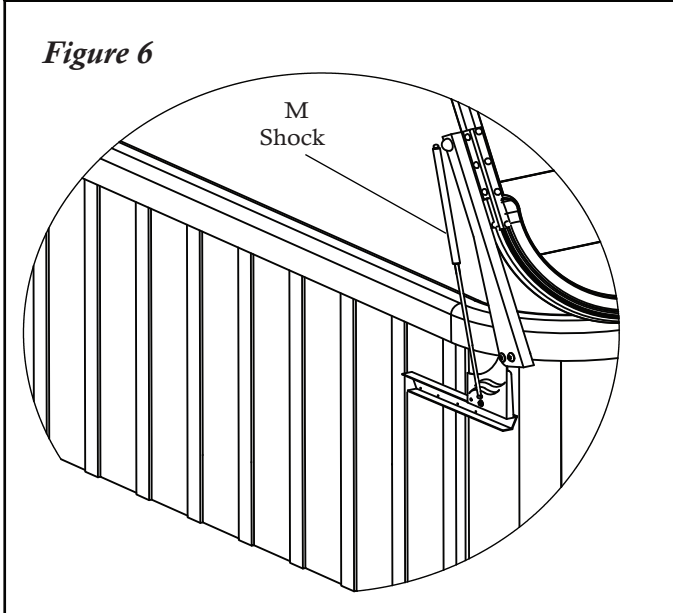


Figure 6

1) Fold the first half of the Smartop cover off the spa. While gripping the EAS handle, motion the Smartop cover into it's vertical upright position.

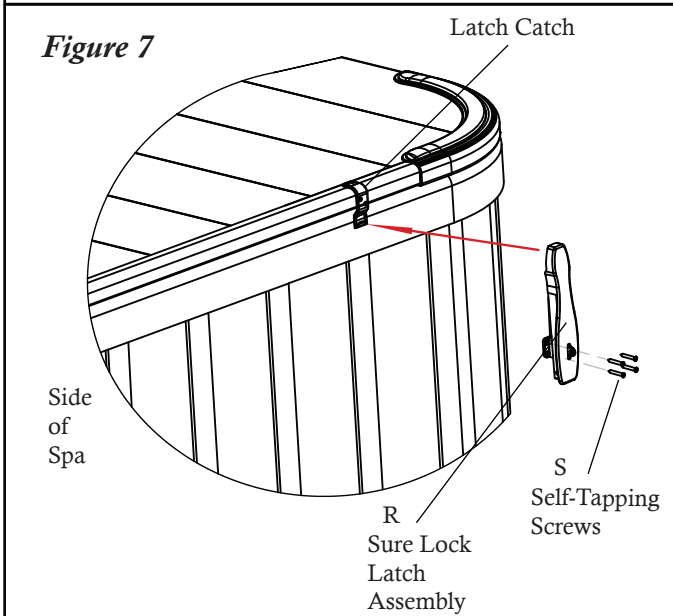


Figure 7

Operation of your Smartop Cover

ITEM	PART#	DESCRIPTION	QTY
A(L)	101990	SMARTOP UPRIGHT 3.0R SPA MOUNTING BRACKET (L)	1
A(R)	101991	SMARTOP UPRIGHT 3.0R SPA MOUNTING BRACKET (R)	1
B(L)	101994	SMARTOP UPRIGHT 3.0 COVER MOUNTING BRACKET (L)	1
B(C)	101995	SMARTOP UPRIGHT 3.0 COVER MOUNTING BRACKET (R)	1
C(L)	100577	SMARTOP UPRIGHT 3.0R FILLER BRACKET (L)	1
C(R)	100578	SMARTOP UPRIGHT 3.0R FILLER BRACKET (R)	1
D	101749	3/8 X 1-3/4" BUTTON HEAD SOCKET BOLT - BLACK ZINC	4
E	100951	3/8 WASHER - BLACK ZINC	4
F	100838	3/8 LOCKNUT - BLACK ZINC	4
G	101885	RUBBER STOP	2
H	101877	PLASTIC SPACER - 3/8 X 1/8"	14
I	100359	#10 X 2" PHILIPS PAN HEAD MOUNTING SCREW	26
J	100016	SMALL BLACK DOME CAPS	34
K	101873	#10 X 1" PHILIPS PAN HEAD SELF-TAPPING SCREW-BLACK	6
L	101996	#10 X 1" PHILIPS PAN HEAD SELF-DRILLING SCREW - BLACK	8
M	101881-101884	SHOCK - 600N - 950N	2
N	100244	5/16 BALL STUD	4
O	100032	5/16 NYLON LOCKNUT	4
P	101552	EAS HANDLE	2
Q	101751	5/16 X 1-1/4" BUTTON HEAD SOCKET BOLT	2
R	101871	SURE LOCK LATCH ASSEMBLY	2
S	101065	#8 X 3/4" PHILIPS FLAT HEAD SELF-TAPPING SCREW - BLACK ZINC	8
T	101078	LOCK	1